


Place kerb to suit over roof opening size, once happy with opening size, once happy with positioning, drill pilot holes approximately 300mm Centres, then fix down with appropriate fixings (i.e. wood screws, metals screws, etc.) then felt as shown

Rooflight Fixing To Kerb

place neoprene tape supplied with rooflight in the centre of the kerbs fixing flange once in place centralise the rooflight on top of the kerb you will see that the rooflight is pre-drilled fix down with self tapping screws along with the seala washers and caps and shown in the drawing

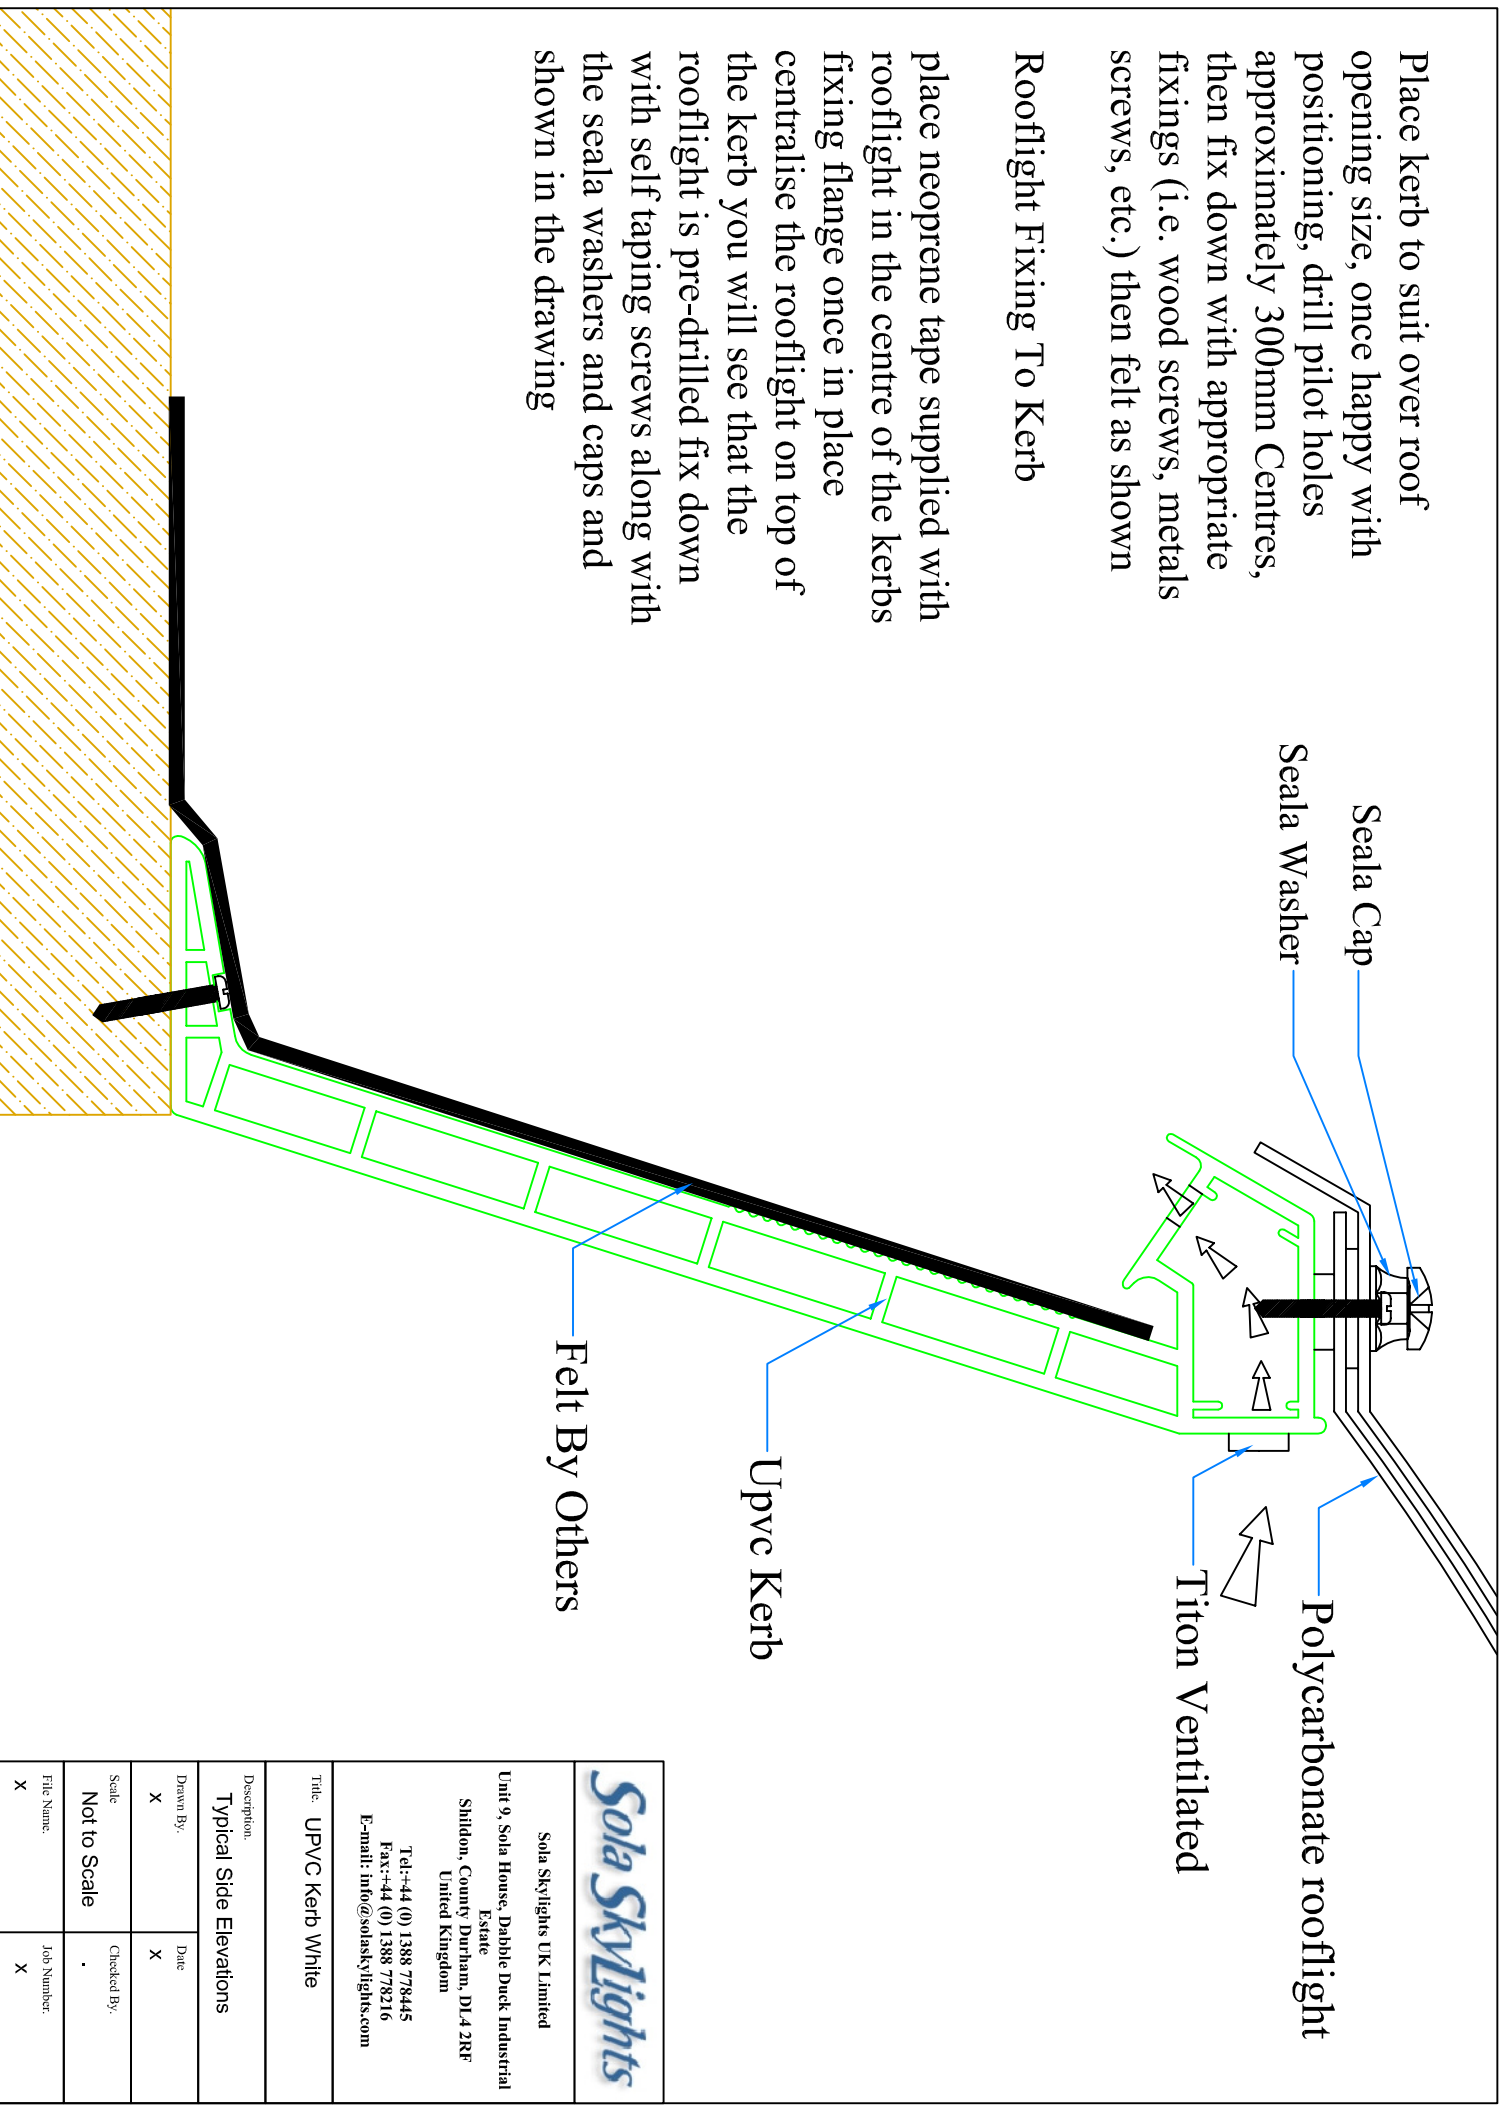

Sola Skylights UK Limited
 Unit 9, Sola House, Dabble Duck Industrial Estate
 Shildon, County Durham, DL4 2RF
 United Kingdom
 Tel: +44 (0) 1388 778445
 Fax: +44 (0) 1388 778216
 E-mail: info@solas skylights.com

Title: UPVC Kerb White

Description:
 Typical Side Elevations

Drawn By:	X	Date	X
-----------	---	------	---

Scale	Not to Scale	Checked By:	.
-------	--------------	-------------	---

File Name:	X	Job Number:	X
------------	---	-------------	---